





1. *Disconnect trailer
& electrical connections*

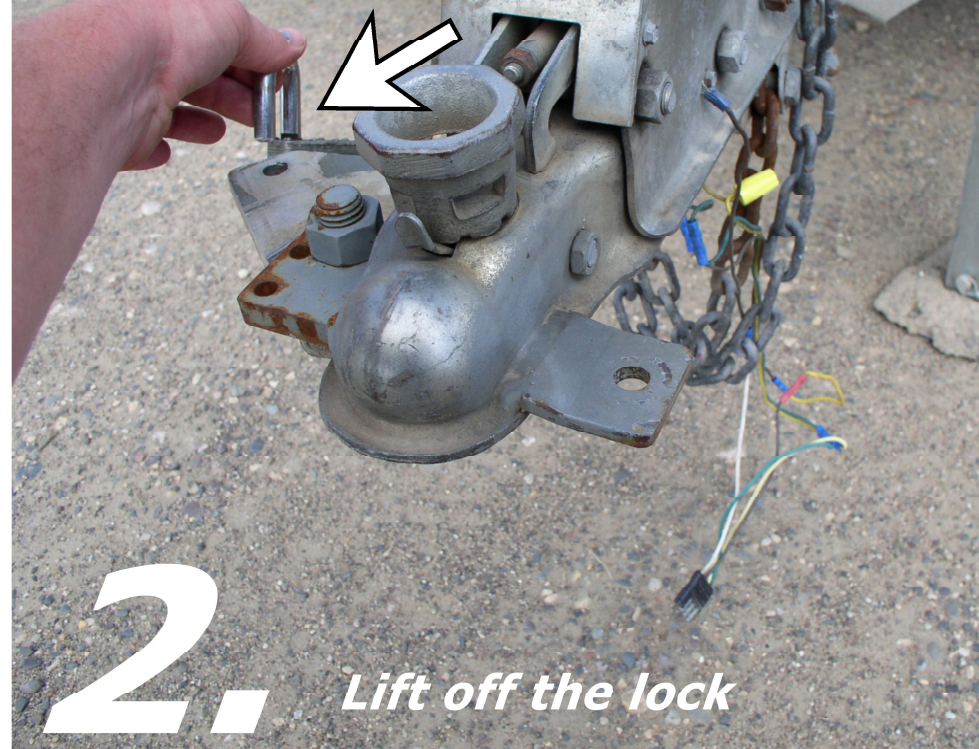

2. *Lift off the lock*

Locking Trailer

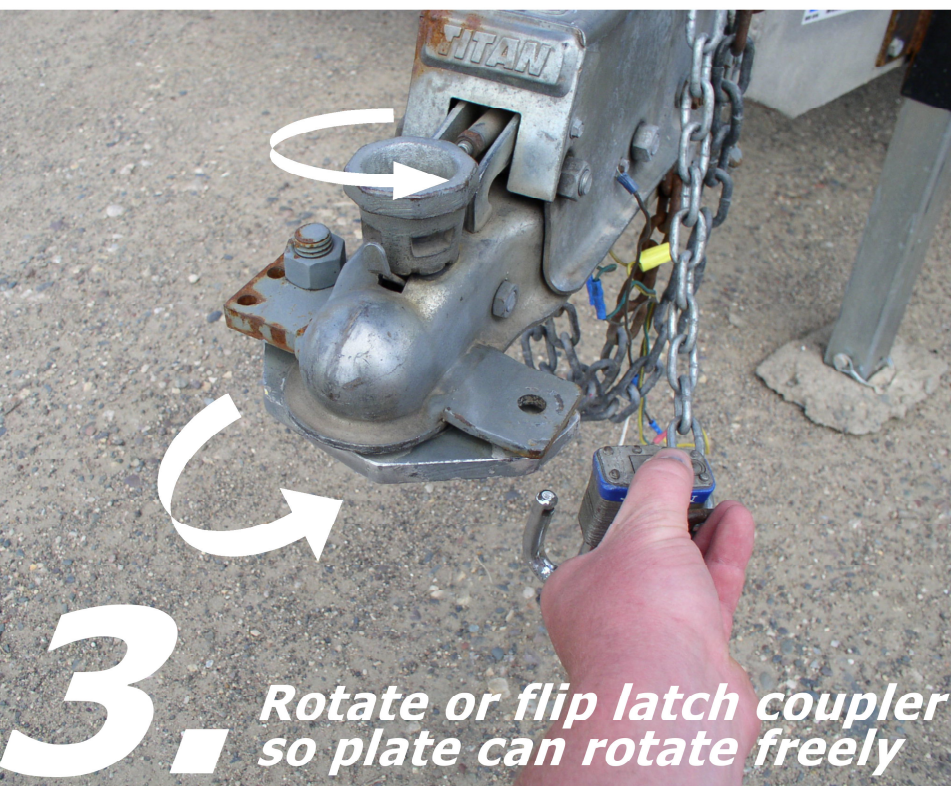

3. *Rotate or flip latch coupler
so plate can rotate freely*



4. *Place lock through holes
as shown and lock*